



## B04 Mini Portable Speaker user manual

A super small travel speaker, offering incredible sound clarity and volume. Easy to carry around and ideal for travel, you can enjoy your music anywhere with your friends. Use as an external speaker for your smartphone, laptop or media player.



### Specifications :

- |                         |                     |                       |                        |
|-------------------------|---------------------|-----------------------|------------------------|
| • Signal / Noise ratio: | > 80 dB             | • Battery voltage:    | 3.7 V                  |
| • Driver:               | 4 oHm 3 Watt        | • Full charging time: | 1.5 hours              |
| • Rating Power:         | 3 W                 | • Weight:             | 45 g                   |
| • Line in:              | 3.5 mm              | • Dimensions:         | 37 x 34 mm             |
| • Rechargeable battery: | Lithium ion 300 mAH | • Power input:        | Micro USB 5 V / 500 mA |

### Features :

- Portable speaker for your smartphone, laptop or media player
- Small and lightweight, while delivering incredible sound
- Aluminium housing offers great protection
- Up to 4 hours external audio from a single charge

### Included :

- Portable speaker
- Audio cable
- USB charging cable
- User manual

### User guide :

- We recommend you charge the speaker for 3 hours before first use.
- Power indicator will show red while charging, and will turn off when fully charged
- To use, simply connect the speaker to your smartphone, laptop or media player with the audio cable provided
- The speaker will automatically switch on when plugged in
- Volume should be controlled via your smartphone, laptop or media player
- Please remove the audio cable when not in use

### Trouble shooting :

- No audio:
  1. Check the audio cable is fully connected to the audio port
  2. Check the audio cable is not damaged
  3. Check the speaker is fully charged
- Speaker does not charge:
  1. Check the power source is compatible (5V/500mA)
  2. Check the charging cable is fully connected to the charging port
  3. Check the charging cable is not damaged
- NO LED indication:
  1. No battery
  2. Audio cable is not fully connected to the audio port

## Warning

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

### Fire and Electric Shock Hazard

- Do not expose your xqisit B04 to liquid, moisture, humidity, or rain.
- Do not use the xqisit B04 near a bathtub, sink, sauna, pool, or steam room.
- Exposure of the xqisit B04 to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the xqisit B04. Such actions could result in electric shock.
- Clean the xqisit B04 only with a dry cloth.
- Do not expose your xqisit B04 to extremely high or low temperatures.
- Do not leave your xqisit B04 in direct sunlight for extended periods of time.
- Do not leave your xqisit B04 near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

### Battery/Charger Hazard

- Do not dispose of your xqisit B04 in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the xqisit B04.
- Do not attempt to disassemble the xqisit B04 or force open the built-in battery because this may result in electric shock.
- Do not charge the xqisit B04 in damp areas or in extremely high or low temperatures because this could result in electric shock.
- Do not clean the xqisit B04 when it is being charged. Always unplug the charger first before cleaning the xqisit B04.

### Automobile Accident Hazard

- Do not leave or store the xqisit B04 or any of its accessories near or over your automobile's air bag because serious injury may result when an airbag deploys.

### Fall Hazard

- Do not place the xqisit B04 on high surfaces such as shelves. During music playback the xqisit B04 may move which could cause the xqisit B04 to shift and fall off of the edge.

### Caution

- Do not use abrasive cleaners to clean your xqisit B04 because this could cause scratches and damage.
- Do not bring your xqisit B04 in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your xqisit B04 unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your xqisit B04 yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your xqisit B04 battery, it is built-in and is not changeable.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your xqisit B04 prior to boarding an aircraft. Do not use the xqisit B04 inside an aircraft unless allowed by your airline.
- Dispose of the xqisit B04 and the xqisit B04's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.



We, STRAX GmbH, declare under our sole responsibility, that the product xqisit B04 (Model-Nr 90-070-S), conforms with the provisions of the following Directives: 1999/5/EC; 2004/108/EC and 2006/95/EC.  
Distributor: STRAX GmbH, Belgische Allee 52+54, 53842 Troisdorf, Germany, [www.strax.com](http://www.strax.com)



WEEE Directive 2002/96/EC Art.11(2)

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and for human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council office or your household waste disposal service.